
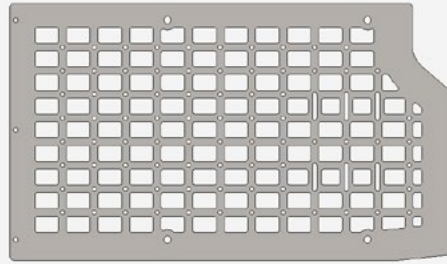


BED CAB MOLLE 2022-UP/RIVIAN R1T AC9402101NA

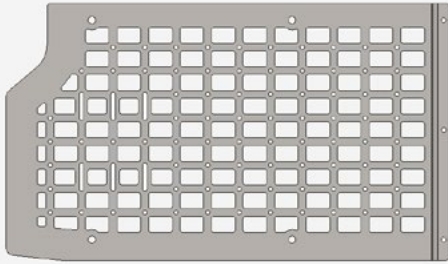

TOOLS REQUIRED

- 7/16, 10mm Sockets
- 7/16, 10mm Wrenches
- Flathead Screwdriver
- 5/32, 4mm Hex

SKILL LEVEL

- Easy

TIME REQUIRED

- Approximately 20 Minutes (This installation guide covers the installation of the product only. It does not include instructions and time for wiring)

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service: 830-896-7571
Rago Fabrication is **not** responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the


performance of these components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***

HARDWARE

A.

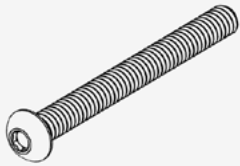

M6-1.0 X 50MM BUTTON HEAD

QTY: 8

A1.



M6 PUSH NUT

QTY: 8

B.



1/4" FLAT WASHER

QTY: 11


B1.



1/4-20 X 3/4" BUTTON HEAD

QTY: 3


B2.



1/4-20 NYLON LOCK NUT

QTY: 3

C.

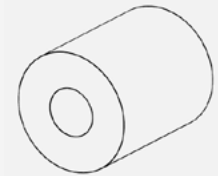

MUS0009


QTY: 8

Reference this page throughout the install





□ STEP 1

Using a (flathead) remove the caps as shown below. Next using a (10mm socket) remove the 8x bolts.

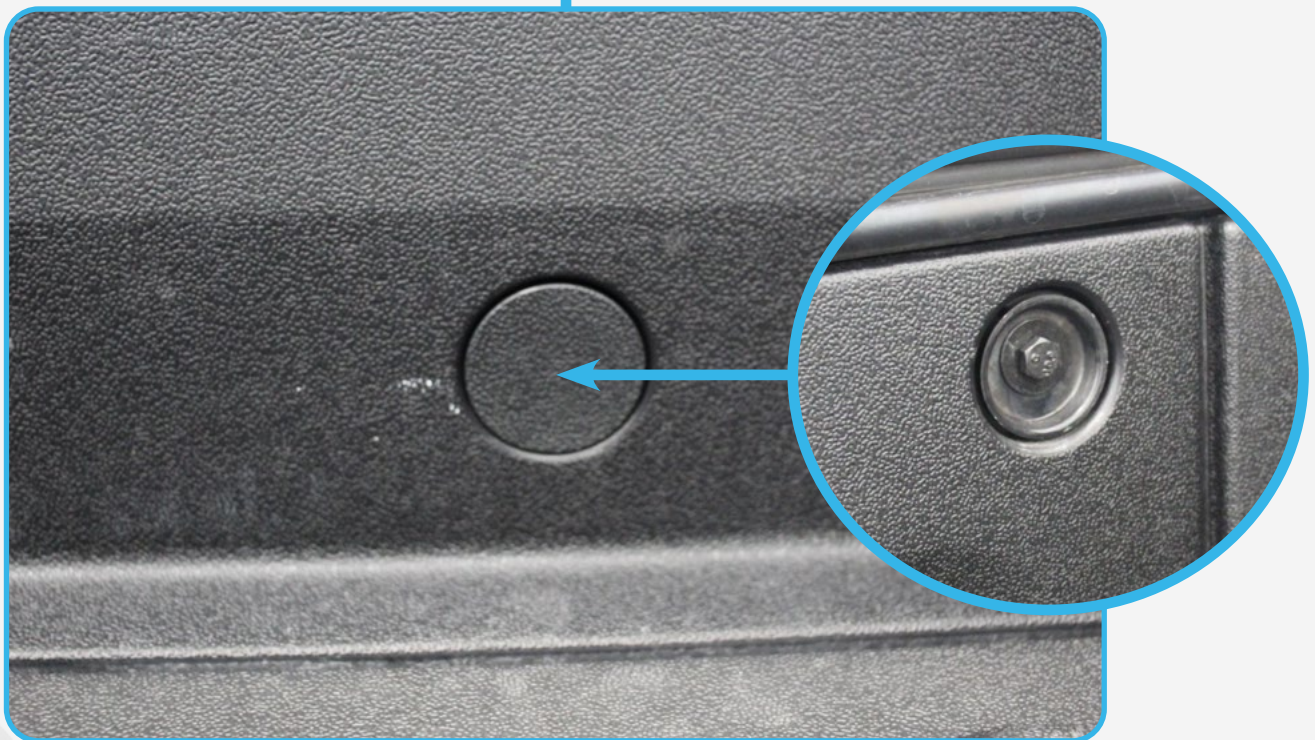



□ STEP 2

Install the bed cab molle together with the provided (**B, B1, B2**) 1/4 hardware using a (**5/32 allen**) and a (**7/16 wrench**).

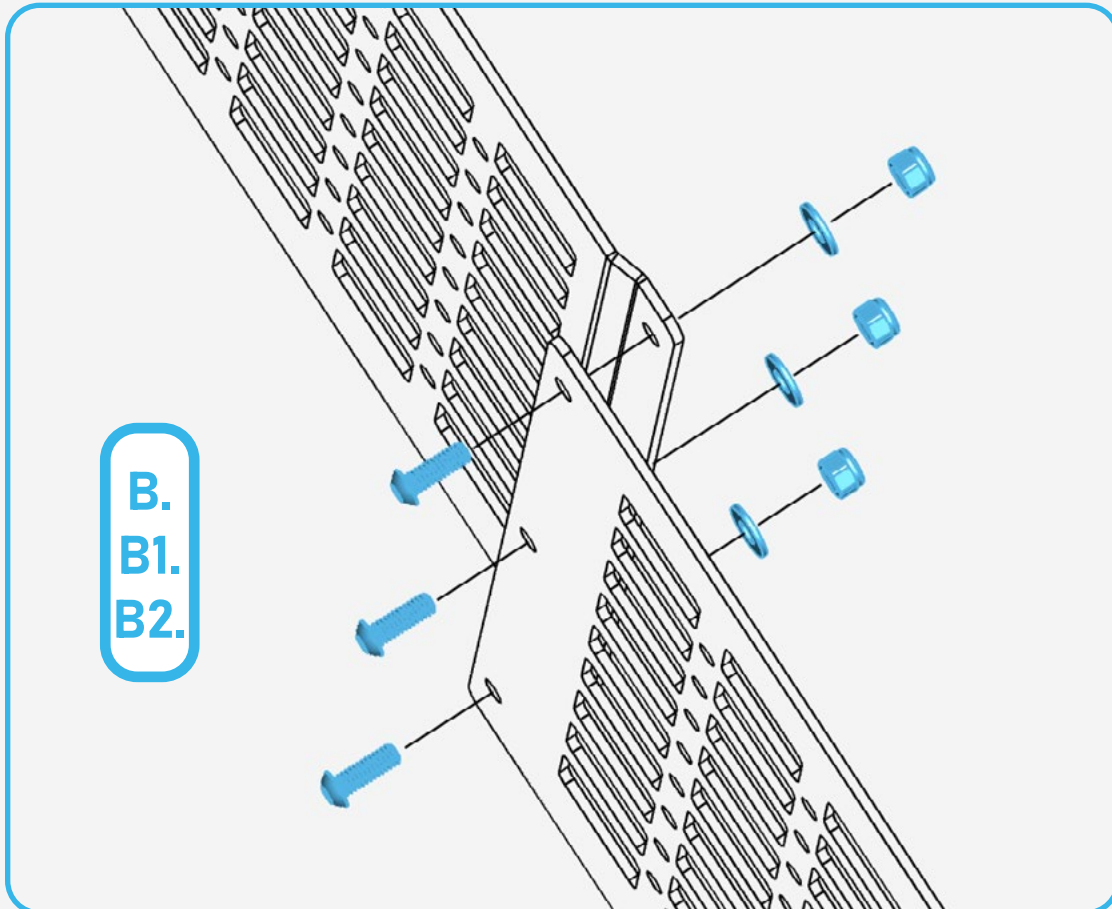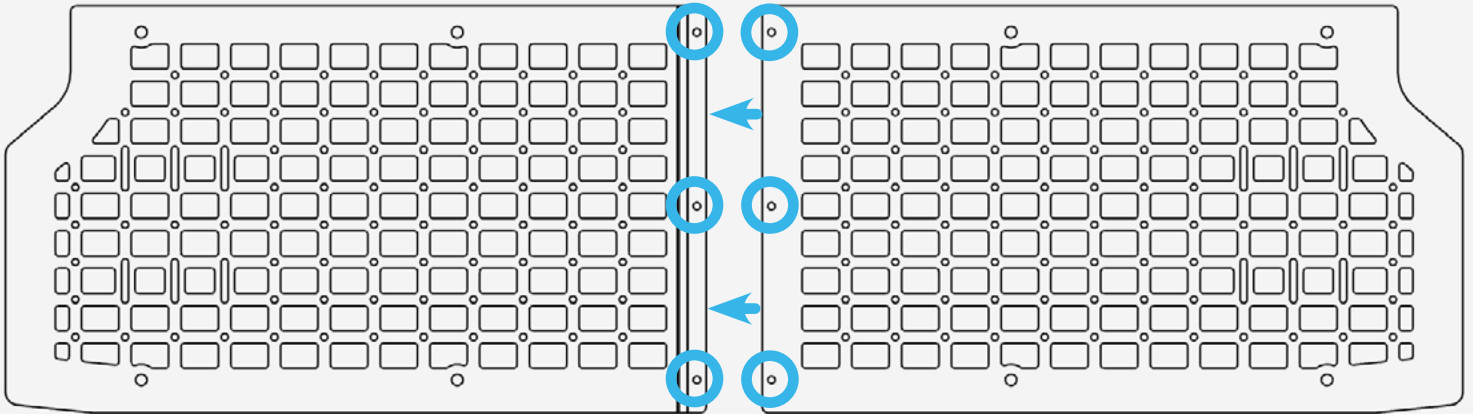


□ STEP 3

Install the provided (A, A1, B, C) M6 hardware with the spacer as shown below in the 8x holes.

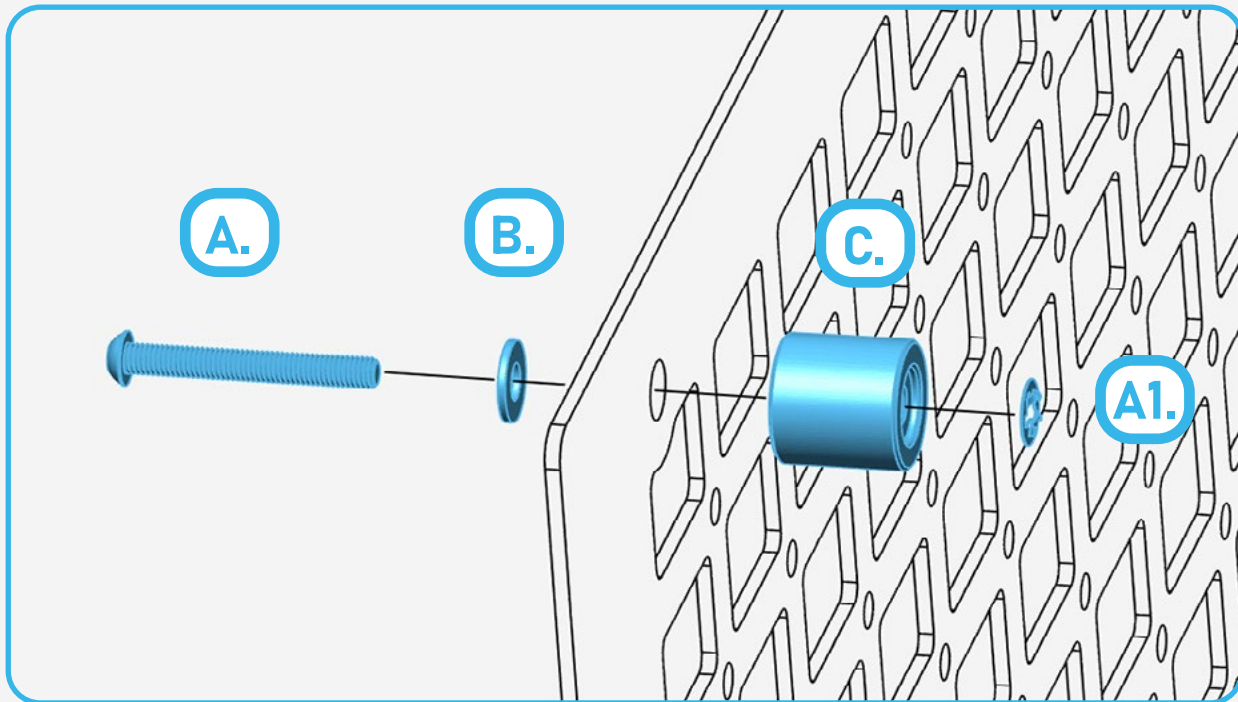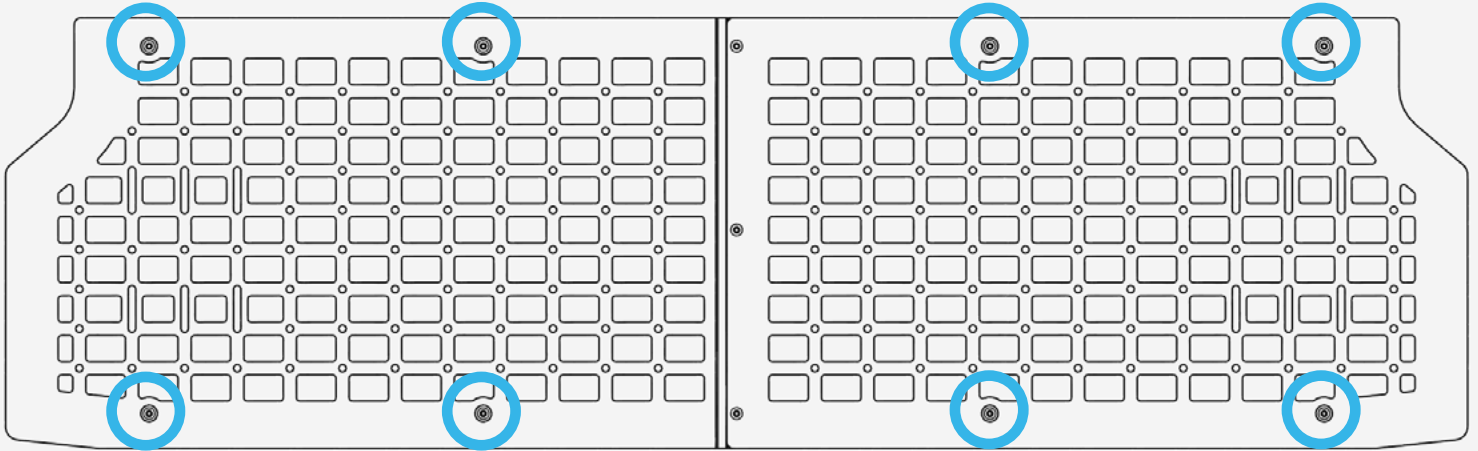

□ STEP 4

Using a (4mm allen), install the bed cab molle.

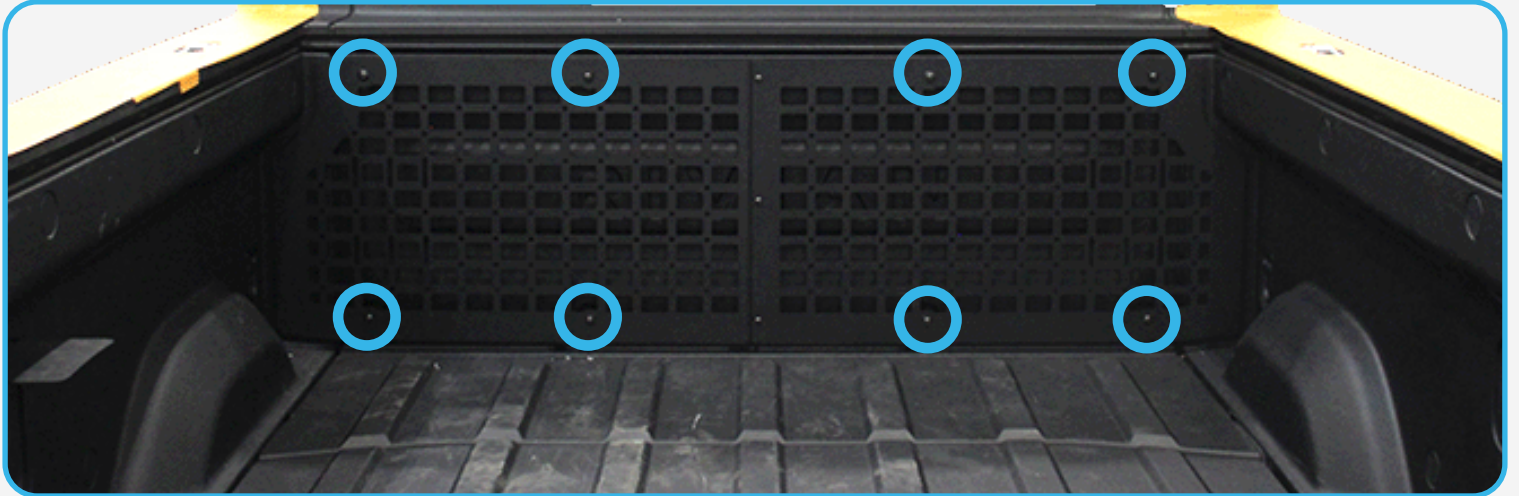

□ STEP 5

Stand back and enjoy your new RAGO EV Bed Cab Molle.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.

